


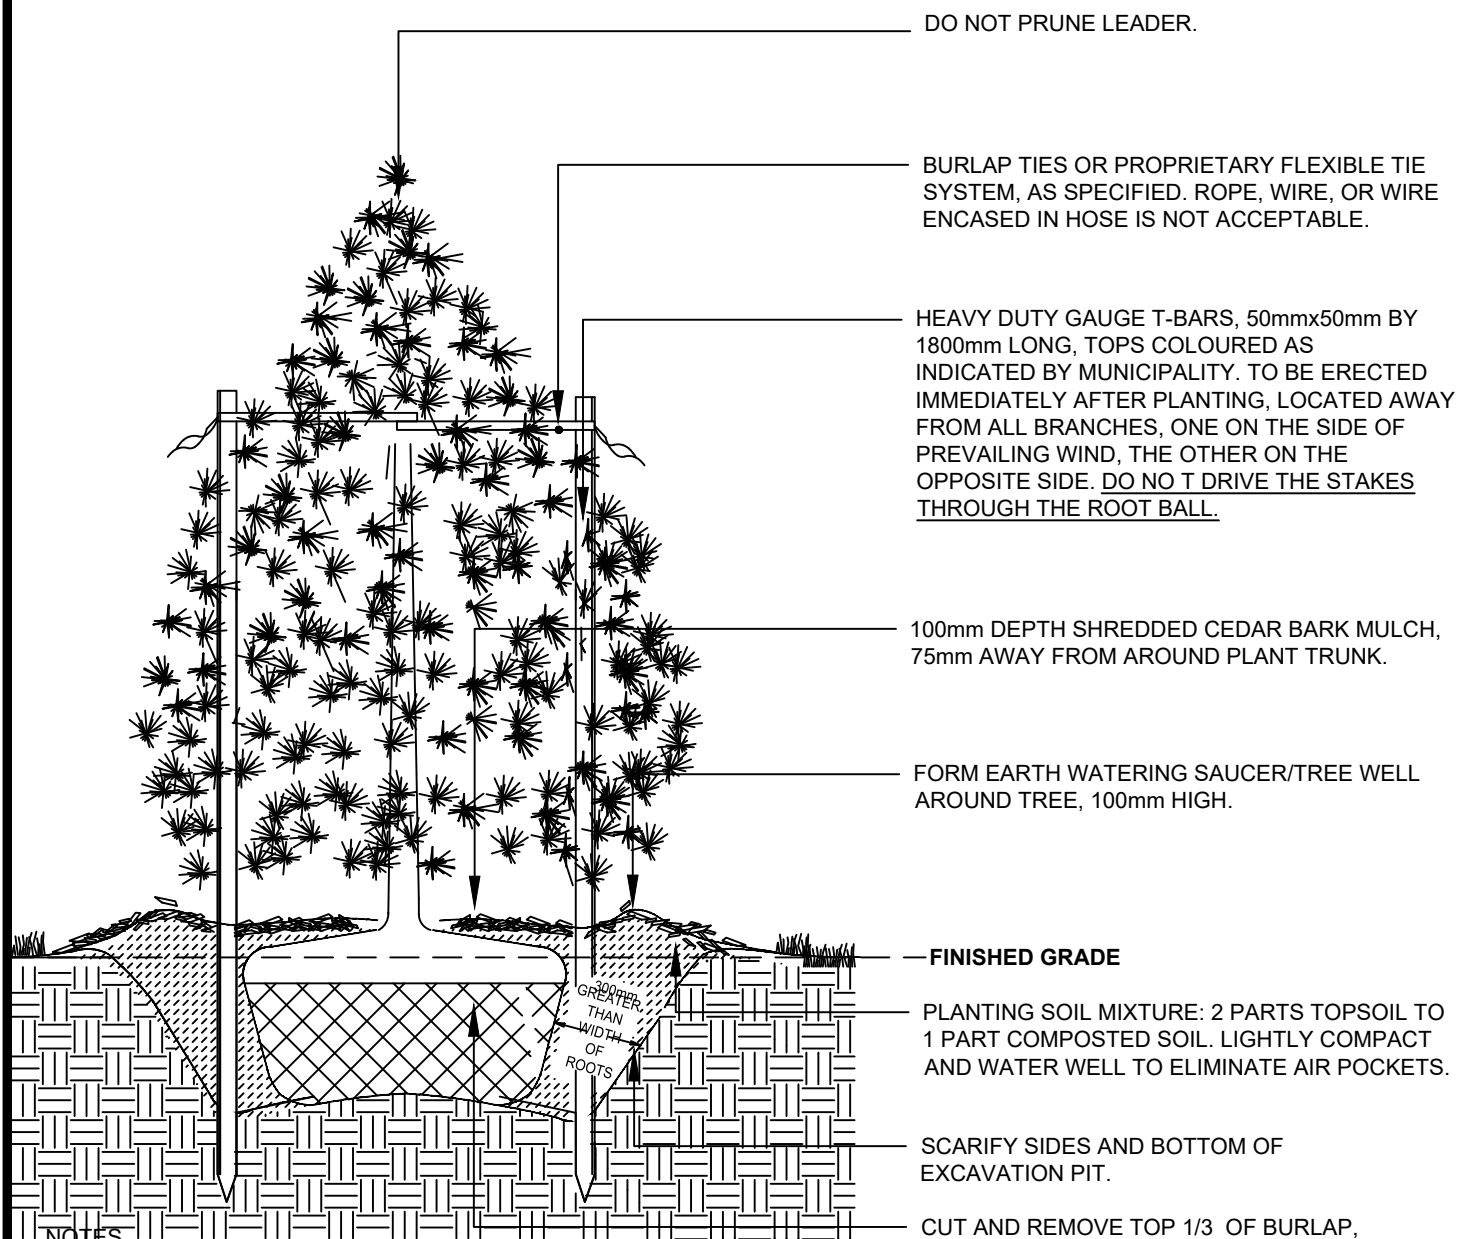

NOTES

- DO NOT ALLOW AIR POCKETS WHEN BACKFILLING.
- POSITION CROWN OF ROOT BALL 100mm ABOVE FINISHED GRADE TO ALLOW FOR SETTLING.
- DO CORRECTIVE PRUNING TO RETAIN NATURAL FORM OF TREE AS DIRECTED BY THE ARBORIST OR LANDSCAPE ARCHITECT, INCLUDING REMOVAL OF DEAD, BROKEN, OR CROSSING BRANCHES OR CODOMINANT LEADERS. DO NOT REMOVE MORE THAN 20% OF LIVE CANOPY.
- PRUNE GIRDLING ROOTS.
- WHEN TREES ARE PLANTED ON SLOPES, SEE DRAWING TOISD 903. BOTTOM OF PLANTING PIT TO BE SLOPED TO PROVIDE POSITIVE DRAINAGE.
- NO TREE PITS SHALL BE LEFT OPEN OVERNIGHT.
- STAKES AND TIES TO BE REMOVED ONE YEAR AFTER PLANTING.
- TREE SHOULD BE STRAIGHT AND BE A MINIMUM OF 200mm TALL.
- TREE SHOULD HAVE A STRONG LEADER.
- BARE ROOT STOCK WILL NOT BE ACCEPTED.

4	TO REFLECT TOWN STANDARDS	TOI	APRIL 2020
3.	TO REFLECT TOWN STANDARDS	TOI	MAY 2016
2.	REVISED TOWN LOGO	TOI	APRIL 2015
1.	TO REFLECT TOWN STANDARDS		MAY/14
NO.	REVISIONS	APR'D	DATE



CONIFEROUS TREE PLANTING

DRAWN: A&A

APR'D:

SCALE: N.T.S.

DATE: JUNE 2011

METRIC
ALL DIMENSIONS IN mm
UNLESS OTHERWISE NOTED

**TOISD
902**